

# **EcoTec Floor-Foam**<sup>TM</sup>

High Performance Over Flooring Insulation Kit

## **Technical Data & Installation Guide**



***Designed for under Carpet, Laminate,  
Vinyl and Wooden Floors***



**ECOHOME INSULATION**



# EcoTec Floor-Foam™

## High Performance Over Flooring Insulation Kit

### Wooden Floors


Cut the EcoTec Floor-Foam to the desired length of the floor, creating cuttings around radiator pipes and door frames. Floor-Foam can be easily cut with a sharp blade or Multifoil Scissors. Both can be found under our 'Things You'll Need' section on our website.

Staple the insulation into place at minimum intervals of 300mm. We recommend our Heavy Duty Staple Gun which is supplied with 5,000 14mm Staples. This product can be found under our 'Things You'll Need' section our website.

Seal the EcoTec Floor-Foam using ThermaSeal Foil Tape, supplied in the DIY Insulation Kit. We recommend to seal all butt joints and perimeter to ensure you have created a complete seal.

You can then install your underlay for Carpet and Laminate directly over the Floor-Foam.

If installing a Tile, Vinyl, Carpet Tiles or LVT flooring we recommend to install a thin plywood over the EcoTec Floor-Foam as this will give the flooring a completely solid surface to lay on and will prevent cracking.

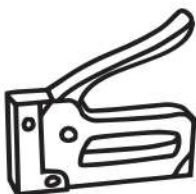

View Our Full Installation Guide and  How-To Video by Scanning the QR Code here



## ECOHOME INSULATION

Email: [sales@ecohome-insulation.com](mailto:sales@ecohome-insulation.com)

# EcoTec Floor-Foam™

## High Performance Over Flooring Insulation Kit

### Concrete Floors

Cut the EcoTec Floor-Foam to the desired length of the floor, creating cuttings around radiator pipes and door frames. Floor-Foam can be easily cut with a sharp blade or Multifoil Scissors. Both can be found under our 'Things You'll Need' section on our website.

Adhere the insulation to the floor using either ThermaSeal Double Sided Tape or Non-Solvent adhesive.

Seal the EcoTec Floor-Foam using ThermaSeal Foil Tape, supplied in the DIY Insulation Kit. We recommend to seal all butt joints and perimeter to ensure you have created a complete seal.

You can then install your underlay for Carpet and Laminate directly over the Floor-Foam.

If installing a Tile, Vinyl, Carpet Tiles or LVT flooring we recommend to install a thin plywood over the EcoTec Floor-Foam as this will give the flooring a completely solid surface to lay on and will prevent cracking.



View Our Full Installation Guide and  How-To Video by Scanning the QR Code here



**ECOHOME INSULATION**

**Email: [sales@ecohome-insulation.com](mailto:sales@ecohome-insulation.com)**




# **EcoTec Floor-Foam**<sup>TM</sup>

**High Performance Over Flooring Insulation Kit**

## **Product Dimensions**

Width	1200mm
Length	25m
Weight	4.8KG

### **How To Measure Your Floor**

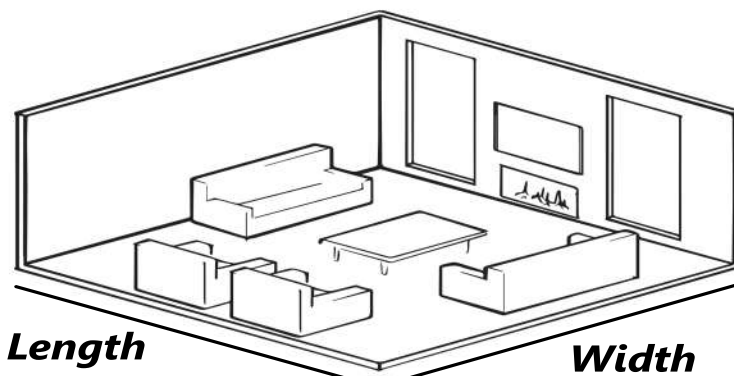

To calculate what size kit you require, measure the length and width of your room and X these measurements together!

**To Order Online at the Lowest Trade Rates with Free Next Day Delivery to the UK Mainland Scan the QR Code Here!**

**(Excludes Highlands and Islands. Relates to orders placed before 2pm (Mon-Thurs))**



**ECOHOME INSULATION**

**Phone: 0114 323 0029**

**Email: [sales@ecohome-insulation.com](mailto:sales@ecohome-insulation.com)**

Disclaimer: EcoTec Floor-Foam has not been independently tested for use with Building Control and is purely for DIY purposes. If you require a product which is fully certified please see our YBS SuperQuilt